



UNCLASSIFIED

GTA 11-03-49

Cyber Center of Excellence

RT-1694D(P)(C)/U AN/PRC-150  
December 2019

U.S. Army Cyber Center of Excellence

Doctrine Division  
Lessons and Best Practices

DISTRIBUTION STATEMENT: Approved for  
Public Release, Distribution Unlimited.

[usarmy.gordon.cyber-coe.mbx.gord-cyber-ll@mail.mil](mailto:usarmy.gordon.cyber-coe.mbx.gord-cyber-ll@mail.mil)

### Radio capabilities

- High frequency (HF) single channel (SC), automatic link establishment (ALE), third generation (3G) ALE)
- Upper side band (USB), lower side band (LSB)
- Frequency modulated (FM) line of site (LOS)
- Continuous wave (CW)
- Amplitude modulation equivalent (AME)

### Frequency, channel program ranges, and antenna

- HF: 1.6 MHz - 29.9999 MHz//Power in Watts 1, 5, 20
- VHF FM: 30 MHz - 59.9999 MHz//Power in Watts 1, 5, 20
- Fixed Mode Channels: 000 - 200
- ALE Channels: 000 - 999
- 3G ALE Channels: 100 - 162
- OE-505 (3 meter) whip, (1.6 MHz - 60 MHz)
- OE-254 antenna, (30 MHz - 88 MHz)
- NVIS AS-2259, (2 MHz - 88 MHz)
- RF1944 antenna, (1.6 MHz - 29.9999 MHz)

3

**Warning:** Ensure proper grounding of radio and antenna systems prior to use. Serious harm to personnel or equipment may occur if proper grounding techniques are not followed.

### Built-In test (BIT)

- Press 7 **OPT** key on radio face
- Select **TEST**: press **ENT**
- Highlight **BIT** on screen: press **ENT**
- Use arrow buttons to highlight **SYSTEM**: press **ENT**  
(A clicking sound is heard while test runs)
- Once results are received: press **CLR** to get back to main screen
- The radio will show **PASSED** once test is complete

### Place radio into operational configuration

- Open battery box on bottom of radio to insert batteries
- Close battery box and secure latches
- Connect hand mic to audio connector J1 port
- Connect the OE-505 3 meter whip antenna base to HF antenna connector J7

4 attempting calls on system

### Program single channel using "SCRATCH PAD" 000

Press 3 **MODE** button on radio face

- Press the 0 **ZERO** button
- Use arrow buttons to highlight the receive frequency: press **ENT**
- Use key pad to enter frequency: press **ENT**
- The transmit frequency becomes highlighted
- Enter transmit frequency: press **ENT**
- Use the arrows to highlight **KEY** on the screen
- Use the up and down arrows to change key type: press **ENT**
- Press **CLR** to return to original screen

### Identify COMSEC keys loaded in RT

- Press 8 **PGM** key on radio face
- Select **COMSEC** on screen: press **ENT**
- Select **KEYS**: press **ENT**
- Select **Type I**: press **ENT**
- Press **CLR**

5

### Load single COMSEC key

- On radio, move function switch to **LD** position
- In **FILL** device screen, use arrows to select **KYK-13** when using an SKL: press **ENT**
- In **CRYPTO TYPE**, select correct type of encryption: press **ENT**
- In **KEY TYPE** and **KEY NUMNER** screen, enter correct crypto set: press **ENT**
- From **SKL** screen select key: press **LOAD** icon at top of SKL screen (it appears as a small laptop)
- In **KEY LOAD SETTINGS**, select **DS-102**
- In the **SKL PROTOCOL** and **ACTIVATE MODE** screen: press **OK**
- In **Ready to Send** screen in **SKL**: press **OK**
- On radio face press **ENT**
- On radio screen look for **FILL DONE**
- **SKL** screen will display **Operation Successful**

6

### Preset channels frequency

- Press 8 **PGM** on radio face
- Use arrows to select **MODE**: press **ENT**
- Select **PRESET**: press **ENT**
- Select **CHANNEL**: press **ENT**
- Enter channel position (example 123): press **ENT**
- In **RX** screen enter receive frequency: press **ENT**
- In **TX** screen enter transmit frequency: press **ENT**
- Put receive frequency in **RX FREQ** screen: press **ENT**
- Put transmit frequency in **TX FREQ**: press **ENT**
- Select modulation: press **ENT**
- **AGC** screen select **OFF**: press **ENT**
- **RX ONLY** screen select **NO**: press **ENT** (unless directed to remain in receive only mode)
- At "LIMIT MAX TX POWER?" screen select **NO**: press **ENT**
- **ENABLE SSB SCAN** select **NO**: press **ENT**
- Exit out to original home screen

7

### Program single channel preset

- Press 8 **PGM** on radio face
- Use arrows and highlight **MODE** on screen menu: press **ENT**
- Highlight **PRESET** on screen: press **ENT**
- Select **CHANNEL**: press **ENT**
- Enter desired channel preset location: press **ENT**
- In **RX** screen put desired frequency: press **ENT**
- In **TX** screen put transmission frequency (it should be the same as the RX frequency): press **ENT**
- In **MODULATION** screen select **FM**: press **ENT**
- In **RX ONLY** screen use up and down arrows to select **NO**: press **ENT**
- In **LIMIT MAX TX POWER** select **NO**: press **ENT**
- In **ENABLE USB SCAN** select **NO**: press **ENT**

8

UNCLASSIFIED

Harris AN/PRC-150  
RT-1694D(P)/U



2

**Setting time of day**

- Press 7 **OPT** button on radio face
- Select **TOD**: press **ENT**
- Enter **TOD** in 24-hour format: press **ENT**
- Enter date and press enter, example of date format (2018-12-27)
- Press 7 **OPT** button to return to main screen

**Self-addressing**

- Press 8 **PGM** button on radio face
- Highlight **MODE**: press **ENT**
- Select **ALE**: press **ENT**
- Select **SELF**: press **ENT**
- Select **Add**: press **ENT**

9

**Set radio operations**

- Press 7 **OPT** button on radio face
- Highlight **RADIO** on screen: press **ENT**
- Scroll through radio TX POWER to select correct transmit power
- In SQUELCH LEVEL select appropriate squelch: press **ENT** (MED should suffice for most operations)
- FM SQUELCH TYPE select appropriate squelch: press **ENT**
- FM SQUELCH TYPE screen select **ENABLE** using arrows: press **ENT**
- COUPLER screen select **ENABLE** using arrows: press **ENT**
- RADIO SILENCE screen select OFF: press **ENT**
- BFO screen consult COMM sheet (typically should be 0 Hz): press **ENT**
- RX NOISE BLANKING select **OFF**: press **ENT**
- In RADIO NAME screen: press **ENT**

10

**Make a call in ALE mode**

- Press 1 CALL button on radio face
- In CALL TYPE screen use arrows to select AUTO: press ENT
- In ADDRESS TYPE select from the list using arrows: press ENT once proper address has been identified
- In INDIV ADDR screen use arrows to select desired address: press ENT
- Begin call

**NOTES:**

- When using preset buttons to go to a new preset, quickly squeeze the hand mic once to engage the internal coupler. This forces the radio to adjust to the new preset.
- There is a slight time delay when keying the radio for transmission. Wait for side tone before sending traffic. Speak clear and concise during transmissions to ensure proper understanding by the distant station.

11

---

---

---

---

---

---

---

---

---

---

---

---

12

13

---

---

---

---

---

---

---

---

---

---

---

---

14

15

**Doctrine Division**  
**Lessons and Best Practices**  
**Branch**  
<https://cybercoedoctrine.army.mil/>

**Cyber Center of Excellence**  
**Fort Gordon, GA. 30905**

16